



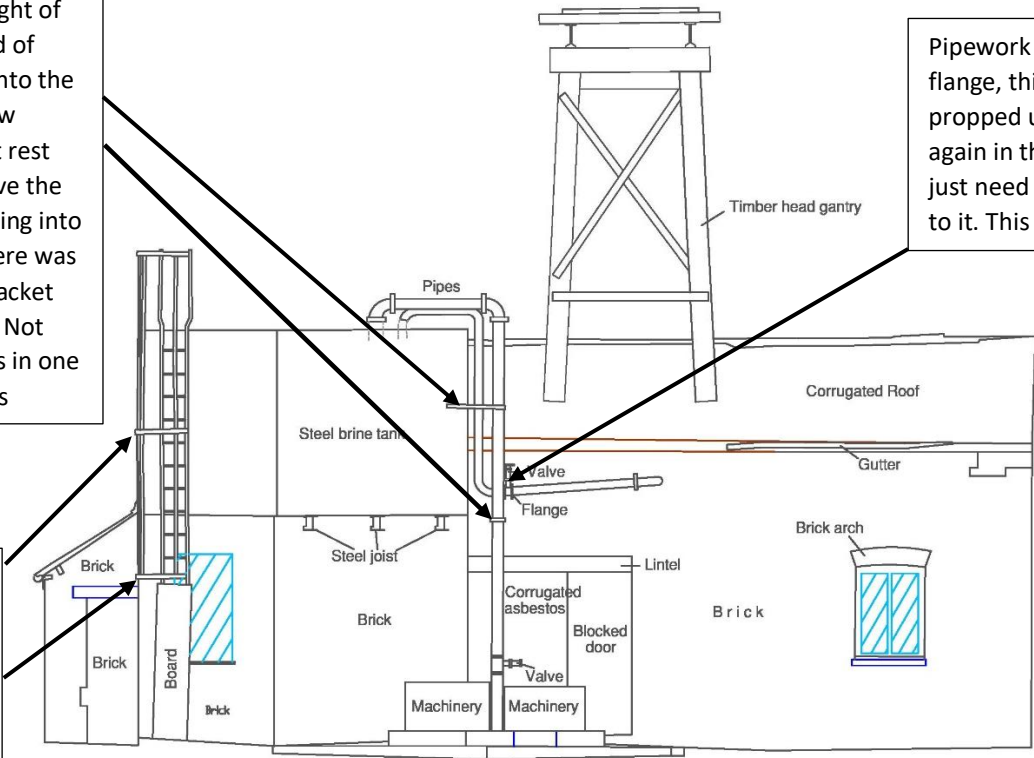
This image shows a pipe coming from the roof of the building. Support bracket gone as seen in the picture, still in place



All pipework and supports kept on site


Pipework removed from the height of the tank. End of pipe did go into the tank, this now needs to just rest up to it to give the illusion of going into the tank. There was a support bracket taken down. Not sure if pipe is in one or two pieces

Pipework removed from flange, this now is just propped up. End was again in the tank so we just need this to rest up to it. This is in two pieces.

Replacement ladder, with original positioning of brackets



 Boarded window  
 Concrete

 Wood/timber

0 2 m  
 1:75 @ A4